


Oil Level Gauge Instructions

1. Position the adjustable height ring on the oil level rod at the correct measured oil level height.

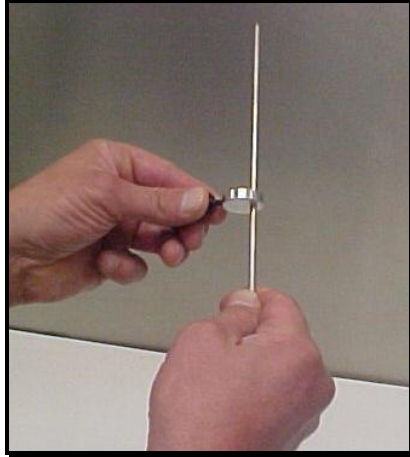

2. Hold the adjustable height ring on top of the fork tube so the oil level rod is inside the fork. Fork needs to be fully collapsed, with the springs and spacers out to set oil level.



3. Pull the plunger on the syringe until no oil is being removed. Oil level is set.