



## Traxxion Showa BPF Extended Fork Cap Housing Installation Instructions

1. Hold stock fork cap upside down and remove the retaining spring clip (use small flat head screwdriver with sharp tip).
2. Remove steel and rubber bumper.
3. Heat the silver aluminum piece (this part has thread lock on it) and unscrew it.
4. Remove the adjusters and re-install them into the new housing. Pay attention to the orientation of the parts.
5. Re-assemble rest of the cap in reverse order.

