



Traxxion Showa Extended Fork Cap Housing Installation Instructions

1. Turn preload all the way out to the softest setting.
2. Hold stock fork cap upside down and remove the retaining spring clip (use small flat head screwdriver with sharp tip).
3. Use 19mm box end wrench or ratchet with 19mm socket to hold the blue preload adjuster from spinning and use 17mm wrench to unscrew the steel part with 2 flats from the blue preload adjuster (note this might be difficult due to loctite on the threads – if needed use heat gun to heat the steel part).
4. Remove steel washer and push preload adjuster out of the housing.
5. Lube the o-rings and inside of the Traxxion extended fork cap housing where the washer touches with grease.
6. Insert the preload adjuster into the housing pushing it all the way in. Install steel washer.
7. **MAKE SURE THAT THE SQUARE STEEL PLATFORM IS TURNED ALL THE WAY UP TO THE END WITH THE 2x17mm FLATS.**
8. Screw the steel part back onto the preload adjuster and tighten to about 40-50 ft/lbs. Check the square steel platform – you should be able to easily move it left and right slightly. If you can't then you missed step #7 and the platform bottomed out on the threads instead of the steel piece tightening up against the preload adjuster. Loosen the steel piece and correct this if necessary.
9. Install spring retaining clip back onto the preload adjuster and swap the o-ring from the old housing onto the new housing.